


LIQUADE®

EOM

Engineer Operation
& Maintenance

LIQUADE®

www.liquade.com

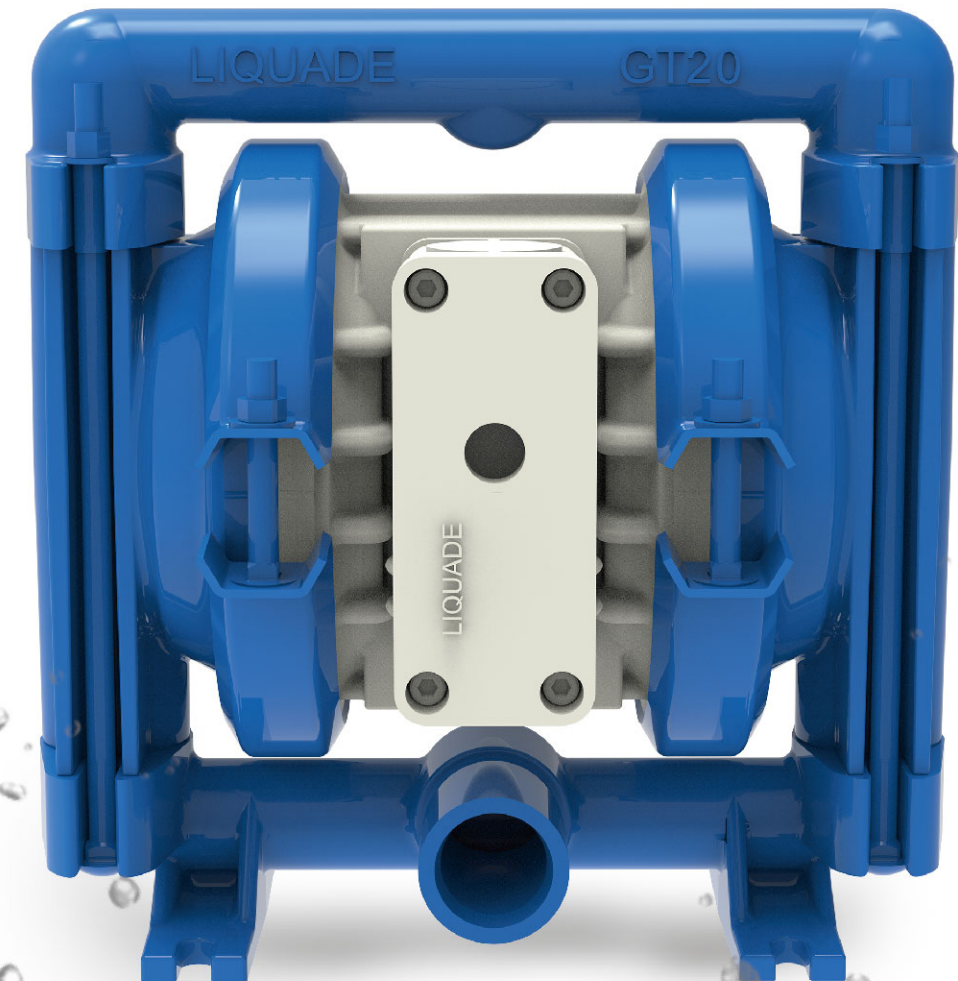

GT20

Metal Pumps



CONTENTS

SECTION 1	CAUTIONS
SECTION 2	PUMP DESIGNATION SYSTEM
SECTION 3	DIMENSIONAL DRAWING
SECTION 4	PERFORMANCE CURVES
	GT20 METAL Santoprene-Fitted
	GT20 METAL PTFE-Fitted
	Suction Lift Curves
SECTION 5	SUGGESTED INSTALLATION
SECTION 6	TROUBLESHOOTING
SECTION 7	PUMP DISASSEMBLY
	Pump Disassembly
	Air Valve / Center Section Disassembly
	Reassembly Hints & Tips
SECTION 8	EXPLODED VIEW & PARTS LISTING
	GT20 METAL Exploded View
	GT20 METAL Parts Listing
SECTION 9	ELASTOMER OPTIONS

⚠ TEMPERATURE LIMITS:

Material	Temperature Limit (Celsius)	Temperature Limit (Fahrenheit)
Polypropylene	0°C to 79°C	+32°F to 175°F
PVDF	-12°C to 107°C	+10°F to 225°F
Santoprene	-40°C to 107.2°C	-40°F to +225°F
Neoprene	-17°C to 93.3°C	0°F to 200°F
BUNA	-12°C to 82°C	10°F to 180°F
VITON	-40°C to 176.7°C	-40°F to 350°F
EPDM	-51°C to 137.8°C	-60°F to 280°F
HYTREL	-28.9°C to 104.4°C	-20°F to 220°F
PTFE	-4°C to 107°C	+24.8°F to 175°F

CAUTIONS:

All wetted components have temperature limit, this must be taken in to consideration when selecting pump materials. For example: PTFE has a maximum limit of 104.4°C (220°F) but Polypropylene has a maximum limit of only 79°C (175°F).

- Maximum temperature limits are based upon mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperatures. Refer to engineering guide for chemical compatibility and temperature limits.
- Diaphragm rupture might happen during pumping operation, this will result in the liquid being pumped to be force out of the air exhaust muffler. Therefore, it is important to wear safety glasses throughout the operation.
- Do not exceed 8.62 bar (125 psig) air supply pressure.
- Detach the compressed air line from the pump before carry out maintenance and repair as this helps to release all air pressure from the pump and follow by disconnect all suction, discharge and air line. Drain the pump by turning it upside down and allowing any fluids to flow into a suitable container.
- Blow out the air line for 10 to 20 seconds before connecting to pump to ensure all pipe lines are free from particles. Use an in-line air filter. A 5μ (micron) air filter is recommended.
- Check the chemical compatibility of the process and cleaning fluid to the material of the pump’s component in the Chemical Resistance Guide.
- The GT20 pump is not submersible.

WARNING:

- Prevention of static sparking – Fire or explosion might take place if static sparking occurs. Thus, it is important to ground all pump, valves and containers when dealing with ignitable liquids and whenever discharge of static electricity is a hazard.

NOTES:

- Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.
- Fitting may loosen during transportation, it is always important to tighten the clamp bands and retainers before installation.
- When installing PTFE diaphragms,it is important to tighten piston outer simultaneously (turning in opposite directions) to ensure tight fit.
- Plastic series pumps are made of virgin plastic and are not UV stabilized. Expose to direct sunlight for prolonged periods can cause deterioration of plastics.

SECTION 2

GT20 METAL PUMP DESIGNATION SYSTEM

LIQUADE Pump Model Description Chart:

GT20	A	P	P	T	T	P	XXX
Model	Housing	Center Body	Air Valve	Diaphragms	Valve Ball	Valve Seat	Specialty

GT: Air-operated diaphragm pump, GT-Series

Model: Port size, INLET 25mm (1") OUTLET 25mm (1")

Housing material:

A=ALUMINUM
S=STAINLESS STEEL

Center Body material:

P=POLYPROPYLENE
CP=CONDUCTIVE POLYPROPYLENE
A=ALUMINUM

Air Valve material:

P=POLYPROPYLENE
CP=CONDUCTIVE POLYPROPYLENE
A=ALUMINUM

Diaphragm material:

T=PTFE
N=NEOPRENE
W=SANTOPRENE
B=BUNA
V=VITON
E=EPDM
S=SANIFLEX

Valve Ball material:

T=PTFE
N=Neoprene
W=SANTOPRENE
B=BUNA
V=VITON
E=EPDM
H=HYTREL

Valve Seat material:


A=ALUMINUM
S=STAINLESS STEEL

SPECIALTY :

CH=PTFE coated hardware
AT=ATEX certificate
FDA=FDA certificate
BP=BSPT thread
NP=NPT thread

SECTION 3

DIMENSIONAL DRAWINGS

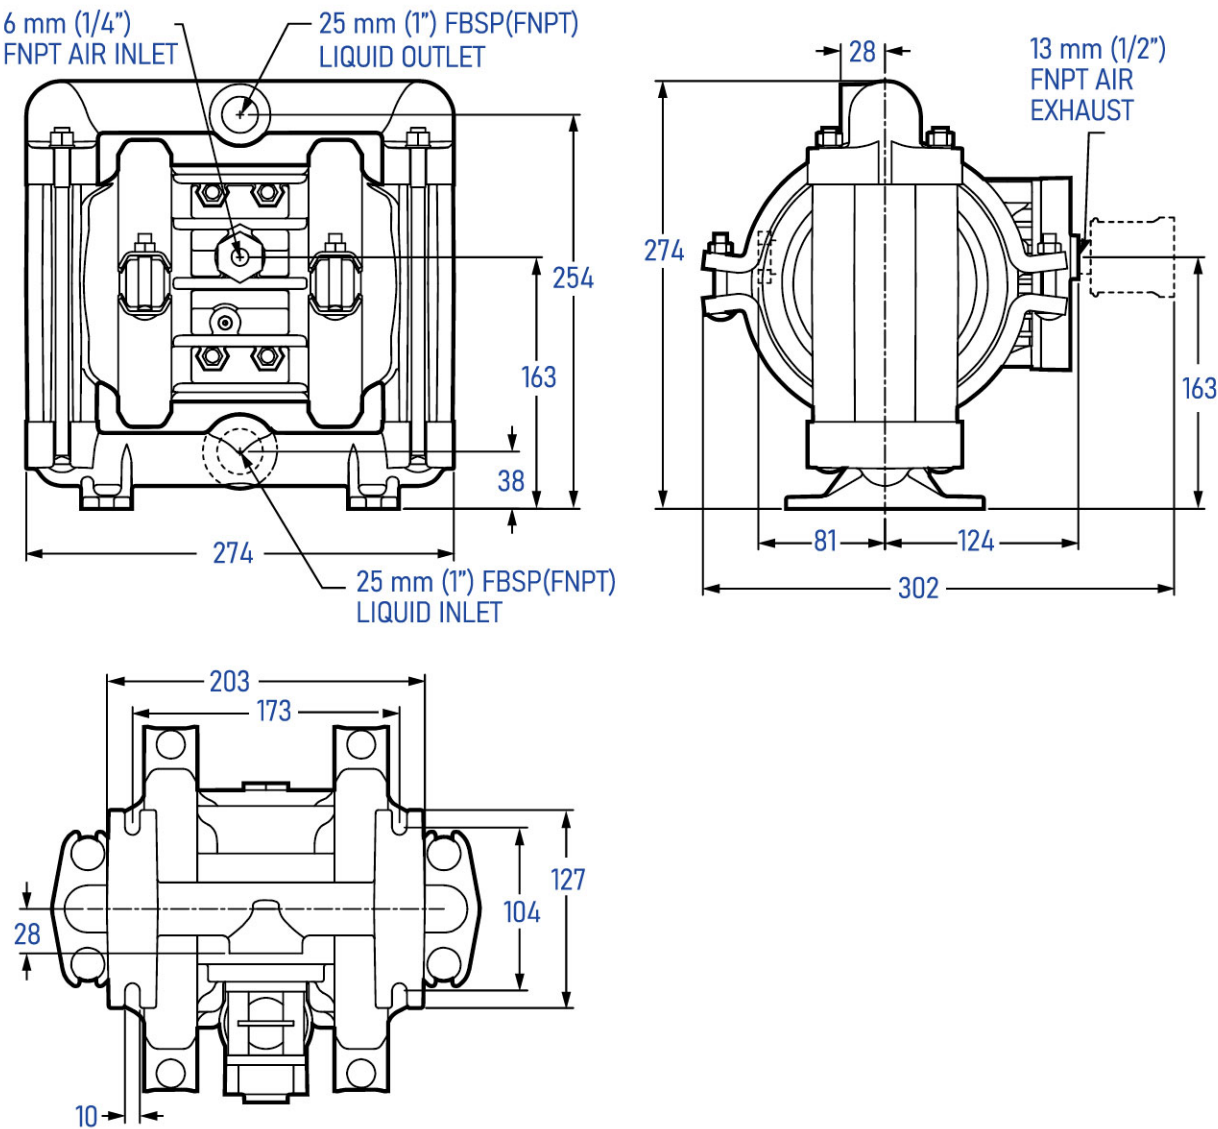

GT20 METAL RUBBER -FITTED


Height ----- 284 mm (10.8")
Width ----- 275 mm (11.2")
Depth ----- 310 mm (12.2")
Est. Ship Weight ---- Aluminum 9 kg (20 lbs)
 Stainless Steel 17kg (37 lbs)
Air Inlet ----- 6 mm (1/4")
Inlet ----- 25 mm (1")
Outlet ----- 25 mm (1")
Suction Lift ----- 5 m Dry (16')
 9.2 m Wet (30')

Displacement Per Stroke
----- 0.3 l gal. (0.08)
Max. Flow Rate ----- 175 lpm (46 gpm)
Max. Size Solids ----- 3.2 mm (1/8")

Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 57 lpm (15 gpm) against a discharge pressure head of 5 bar (70 psig) requires 5.5 bar (80 psig) and 34 Nm³/h (20 scfm) air consumption. (See dot on chart.)

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

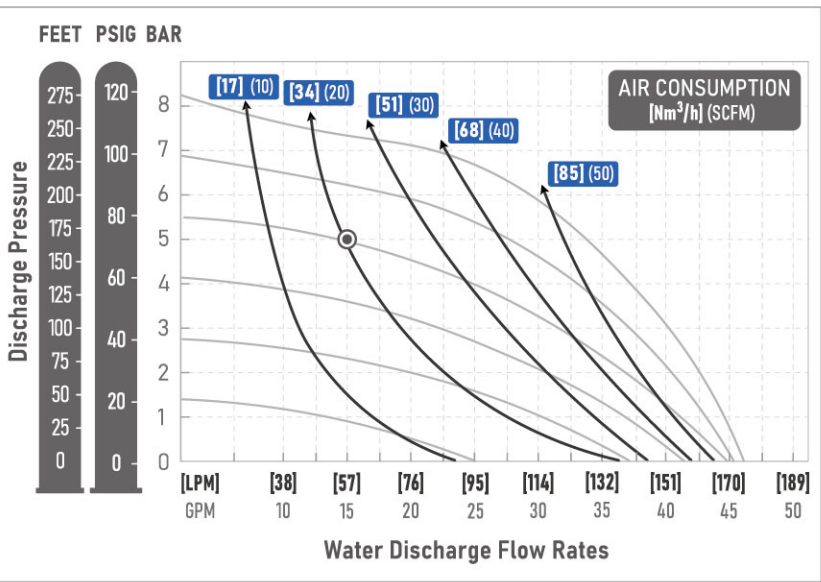

Flow rates indicated on chart were based on pumping water. For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

GT20 METAL TPE -FITTED


Height ----- 284 mm (10.8")
Width ----- 275 mm (11.2")
Depth ----- 310 mm (12.2")
Est. Ship Weight ---- Aluminum 9 kg (20 lbs)
 Stainless Steel 17kg (37 lbs)
Air Inlet ----- 6 mm (1/4")
Inlet ----- 25 mm (1")
Outlet ----- 25 mm (3/4")
Suction Lift ----- 5 m Dry (16')
 9.2 m Wet (30')

Displacement Per Stroke
----- 0.3 l gal. (0.08)
Max. Flow Rate ----- 175 lpm (46 gpm)
Max. Size Solids ----- 3.2 mm (1/8")

Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 57 lpm (15 gpm) against a discharge pressure head of 5 bar (70 psig) requires 5.5 bar (80 psig) and 34 Nm³/h (20 scfm) air consumption. (See dot on chart.)

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

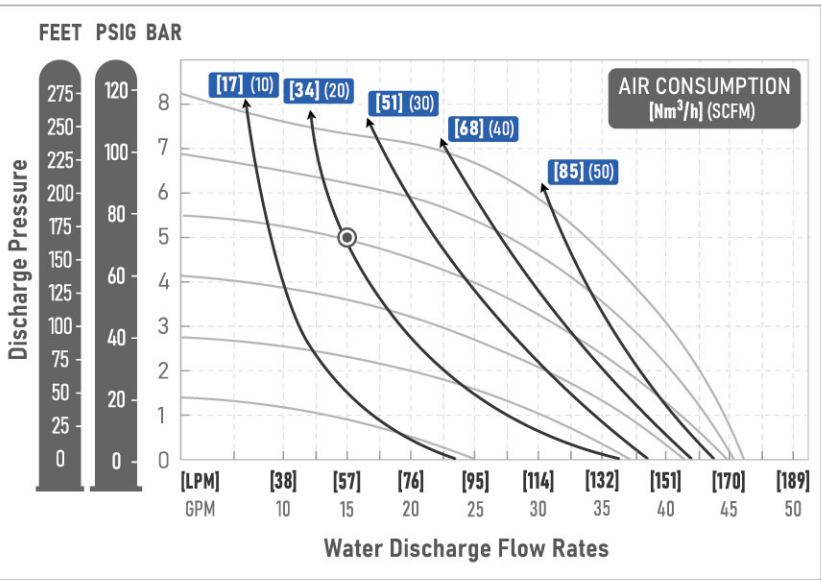

Flow rates indicated on chart were based on pumping water. For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

GT20 METAL PTFE -FITTED


Height ----- 284 mm (10.8")
Width ----- 275 mm (11.2")
Depth ----- 310 mm (12.2")
Est. Ship Weight ---- Aluminum 9 kg (20 lbs)
 Stainless Steel 17kg (37 lbs)
Air Inlet ----- 6 mm (1/4")
Inlet ----- 25 mm (1")
Outlet ----- 25 mm (1")
Suction Lift ----- 4.5 m Dry (15')
 9.0 m Wet (28')

Displacement Per Stroke
----- 0.3 l gal. (0.08)¹
Max. Flow Rate ----- 165 lpm (44 gpm)
Max. Size Solids ----- 3.2 mm (1/8")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 57 lpm (15 gpm) against a discharge pressure head of 5 bar (70 psig) requires 5.5 bar (80 psig) and 30 Nm³/h (18 scfm) air consumption. (See dot on chart.)

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

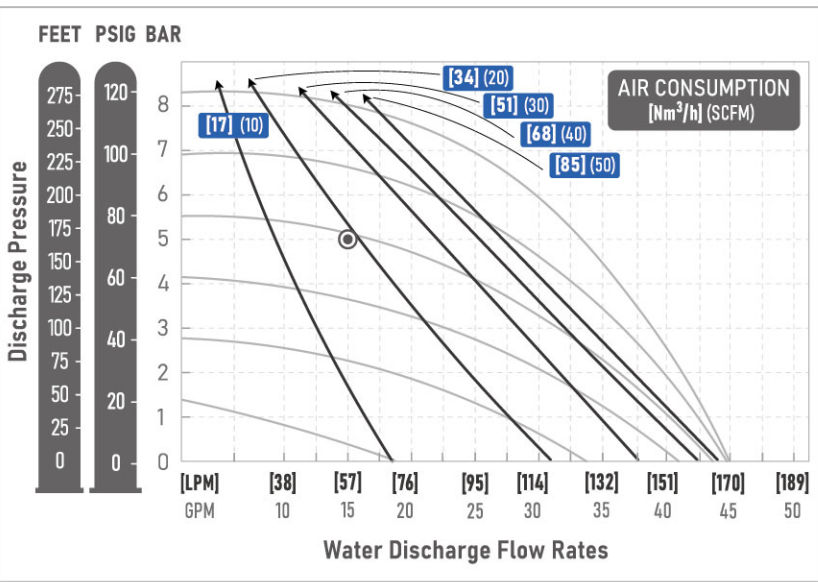


Flow rates indicated on chart were based on pumping water. For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

SUCTION LIFT CURVES

GT20 METAL SUCTION-LIFT CAPABILITY

Suction lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables which can affect your pump's operating characteristics. The number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.

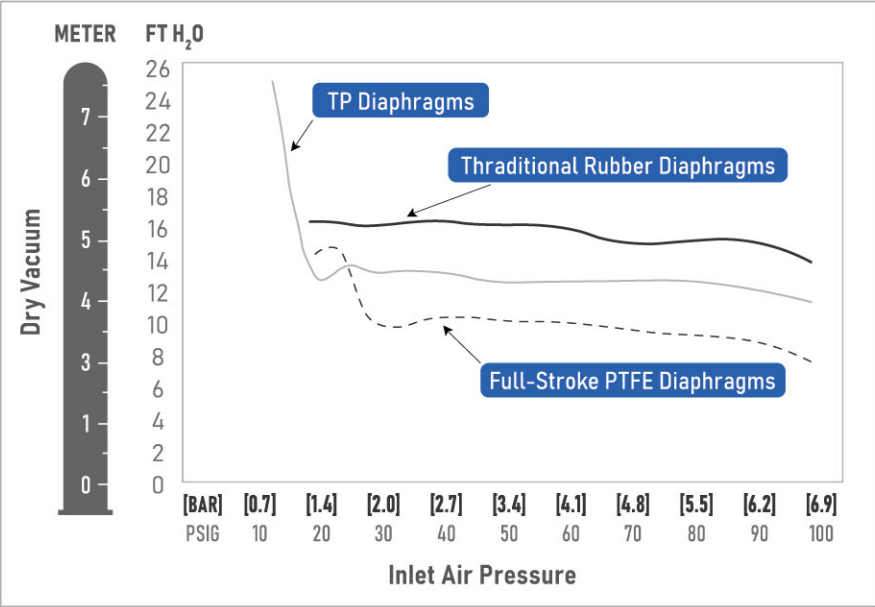

SECTION 5

The model GT20 has a 25 mm (1") inlet and 25 mm (1") outlet and is designed for flows to 170 lpm (45 gpm). The GT20 Metal pump has wetted parts with Aluminum and 316 stainless steel. The common center section of the GT20 Metal is constructed of virgin polypropylene. We also can provide metal and conductive polypropylene materials to better service different requirements (consult factory). A variety of diaphragms and o-rings are available to satisfy temperature, chemical compatibility, abrasion resistant and flex life.

The suction pipe size should be at least 25 mm (1") diameter or larger if viscous liquid is being pumped. The suction hose must be non-collapsible, reinforced type as the GT20 is capable of pulling a high vacuum. Discharge piping should be at least 25 mm (1"); larger diameter in order to reduce friction losses. It is critical that all fittings and connections are air tight to avoid loss of pump suction capability.

INSTALLATION:

Premature failure and long term dissatisfaction can be avoided if reasonable care is carried out throughout the installation process.

LOCATION:

Factors such as noise, safety, and other logistical reasons normally dictate that "utility" equipment be situated away from the production floor. Multiple installations with conflicting requirements can result in congestion of utility areas, leaving few choices for siting of additional pumps. It is advisable every pump should be located in such a way that four key factors are balanced against each other to maximum advantage.

1.ACCESS:

Ensure that the pump locations are easily accessible in order to reduce the time used for the maintenance personnel carrying out routine inspections and adjustments. It helps to speed up the repair process and reduce total downtime especially should major repairs be required.

2.AIR SUPPLY:

To achieve a desired pumping rate, it is important to have an air line large enough to supply the required air volume to every pump location. (Refer to pump performance chart). Use air pressure up to a maximum of 8.6 bar (125 psig) depending on pumping requirements.

3.ELEVATION:

In order to eliminate loss-of-prime problems and not to affect pump efficiency, it is advisable to select a site location that is well within the dynamic lift capability of the pump.

SUGGESTED INSTALLATION

4.PIPING:

It is necessary to evaluate the piping problems of every possible piping location before the final selection of pump site location.

A site with a shortest and straightest hook-up of suction and discharging piping would be the best option when choosing a pump site. Ensure to avoid unnecessary elbows, bends and fittings. It is also important to select pipe sizes to keep the friction losses within limits. All piping to be supported independently of the pumps and piping must be aligned to reduce pump fitting problems.

Flexible hose can be installed to aid in absorbing the forces created by the natural pulsation of the pump. If the pump is to be bolted down to a solid location, a mounting pad placed between the pump and the foundation will assist in minimizing pump vibration. Flexible connections between the pump and rigid piping will also assist in minimizing pump vibration. If quick-closing valves are installed at any point in the discharge system, or if pulsation within a system becomes a problem, a Liquade LD1/2 Dampener should be installed to protect the pump, piping and gauges from surges and water hammer.

When pumps are installed in applications involving flooded suction or suction head pressures, a gate valve should be installed in the suction line to allow closing of the line for pump service.

The GT20 cannot be used in submersible applications.

For self-priming application, make sure that all connections are air tight and the suction lift is within the model's ability. Note: Materials of construction as well as elastomer material have an effect on suction lift parameters. Please consult Liquade distributors for specifics.

Pumps in service with a positive suction head are most efficient when inlet pressure is limited to 0.4–0.7 bar (7–10 psig). If the positive suction is 0.7 bar (10 psig) or higher, it may cause premature diaphragm failure.

THE MODEL GT20 Metal WILL PASS 3.2 MM (1/8") SOLID. A STRAINER SHOULD BE USED ON THE SUCTION LINE TO AVOID LARGER SOLID OBJECTS SUCKED INTO THE PUMP.


CAUTION: DO NOT EXCEED 8.6 BAR (125 PSIG) AIR SUPPLY PRESSURE.

BLOW OUT AIR LINE FOR 10 TO 20 SECONDS BEFORE ATTACHING TO PUMP TO MAKE SURE ALL PIPE LINE DEBRIS IS CLEAR.

▲ The GT pump is not submersible

SECTION 6

TROUBLESHOOTING

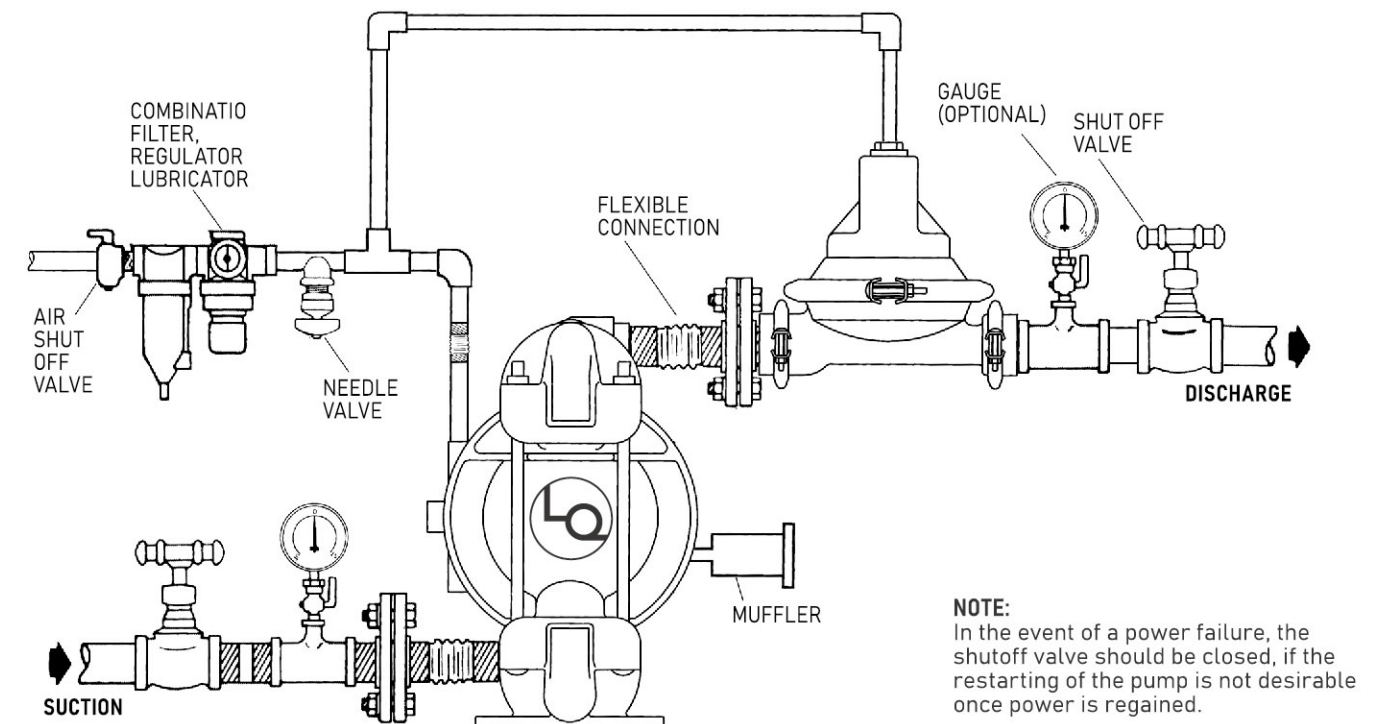

AIR-OPERATED PUMPS:

To stop the pump from operating in an emergency situation, simply close the "shut-off" valve (user supplied) installed in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. This shut-off valve should be located far enough away from the pumping equipment such that it can be reached safely in an emergency situation.

Pump does not run or runs slowly.

1. Ensure that the air inlet pressure is at least 5 psig above startup pressure and that the differential pressure (the difference between inlet and discharge pressure) is to be more than 10 psig.
2. Check air inlet filter for particles (see recommended installation).
3. Check if there is extreme air leakage which would indicate worn out seals/bore.
4. Dismantle pump to inspect for obstructions in the air passageways or objects which would hinder the movement of internal parts.
5. Check for sticking valve ball. Swelling may occur if pumping liquid is not compatible with pump elastomers. Replace valve ball and seals with proper elastomers. Also, as valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace both balls and seats.

Pump air valve freezes.

1. Check for excessive moisture in compressed air. Either install a dryer or hot air generator for compressed air. Alternatively, a coalescing filter may be used to remove the water from the compressed air in some applications.

Pump rattles.

1. Create false discharge head or suction lift.

Pump runs but little or no liquid flows

1. Check for pump cavitation; slow down the pump speed match the viscosity of the pumping liquid.
2. Verify the vacuum required to lift liquid is not greater than the vapor pressure of the material being pumped (cavitation).
3. Check for sticking valve ball. Swelling may occur if pumping liquid is not compatible with pump elastomers. Replace valve ball and seals with proper elastomers. Also, as the valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace both balls and seats.
4. Ensure all inlet connections are tight, especially on the lower valve ball retainers.

Air bubbles found in pump discharge.

1. Check for ruptured failures.
2. Check tightness of outer pistons.
3. Check tightness of clamp bands and integrity of o-rings and seals, especially at inlet manifold.
4. Ensure pipe connections are air tight

Liquid leakage from air exhaust. (Muffler)

1. Check for diaphragm rupture.
2. Check tightness of pistons to shaft.

SECTION 7

DISASSEMBLY / REASSEMBLY

CAUTION: Before perform any maintenance or repair, disconnect the compressed air line to the pump to allow all air pressure to bleed from pump. Disconnect all inlet, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Wet flushing of parts may be required prior to handling.

TOOLS REQUIRED:

- 1/2" Box wrench)
- 9/16" Wrench
- Adjustable Wrench
- Vise equipped with soft jaws

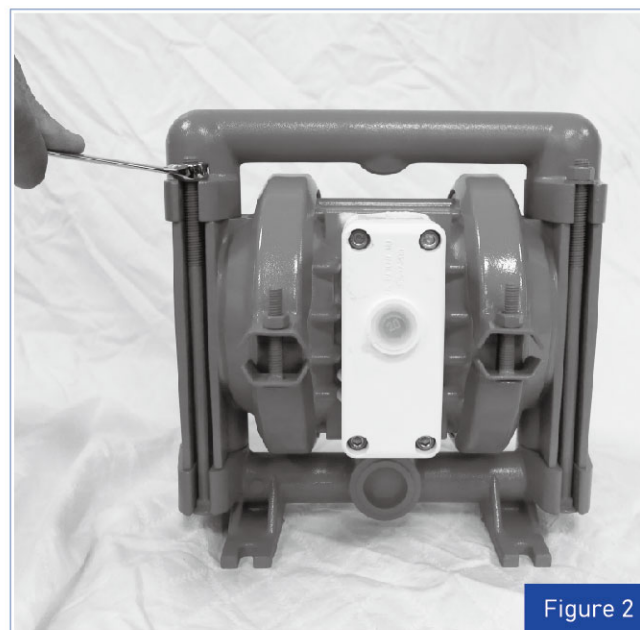


Figure 2

Step 2.

Use a 9/16" wrench, Remove the four carriage bolts which hold the discharge and inlet manifolds.

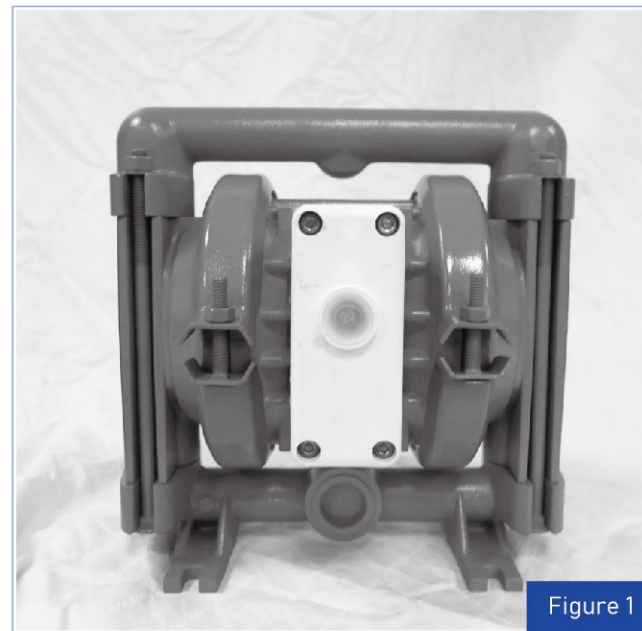


Figure 1

PUMP DISASSEMBLY:

Step 1.

Before carry out disassembly, drain all remaining fluid in the pump into a suitable container by turning it up-side down. Take extra caution if the liquid is corrosive or toxic.

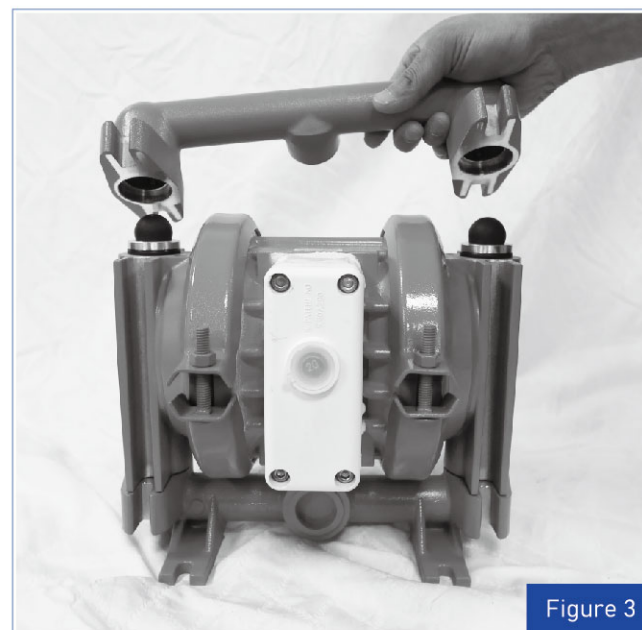


Figure 3

Step 3.

Remove the top manifold and lift up the center section off the inlet manifold.

SECTION 7

DISASSEMBLY / REASSEMBLY

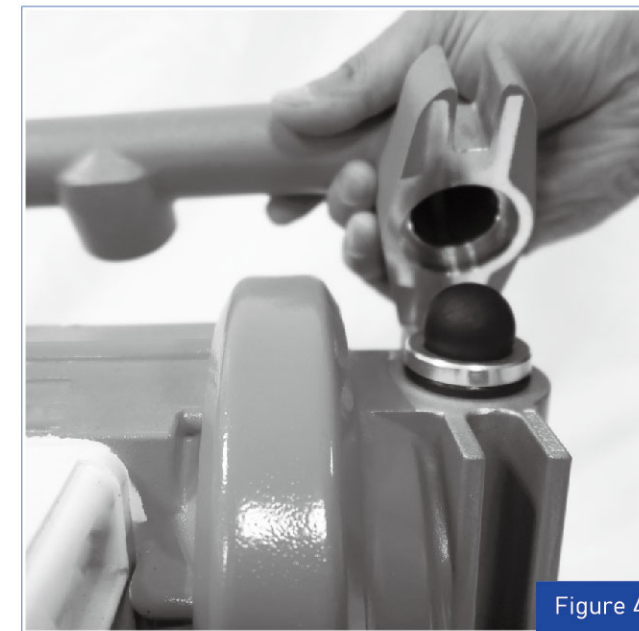


Figure 4

Step 4.

Remove the discharge valve balls, seats and o-rings from the discharge manifold and inspect for nicks, gouges, chemical attack or abrasive wear. Replace with genuine Liquade parts for reliable performance.

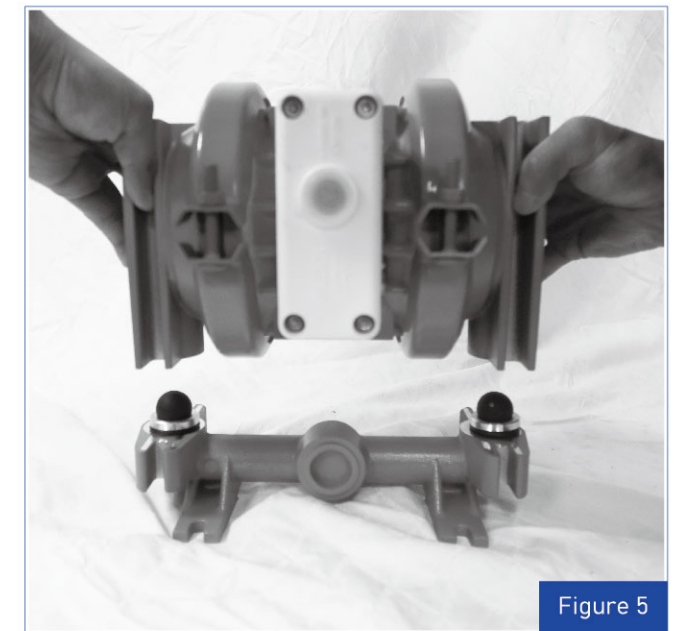


Figure 5

Step 5.

Inspect the ball retainer, retainer o-ring, and valve ball from the bottom of the liquid chamber. Check for nicks, gouges, chemical attack or abrasive wear. Replace with genuine Liquade parts for reliable performance.

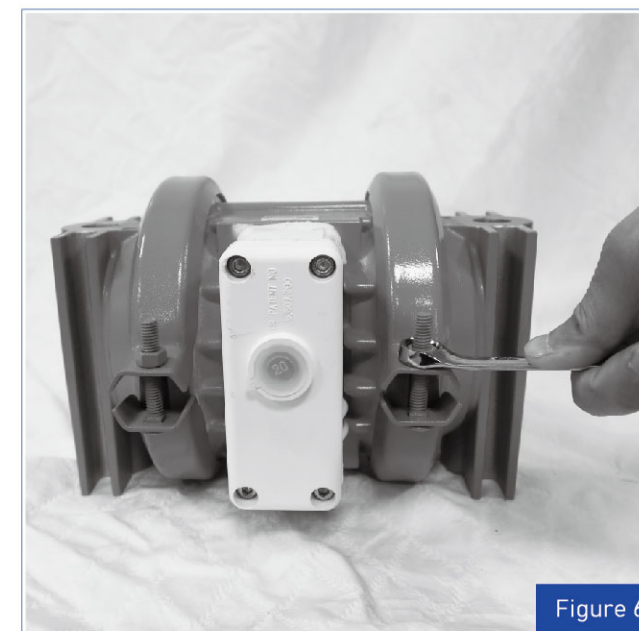


Figure 6

Step 6.

Use 1/2" wrench to loosen clamp band.



Figure 7

Step 7.

Inspect o-rings for wear or damage and replace with genuine Liquade parts for reliable performance.

SECTION 7

DISASSEMBLY / REASSEMBLY

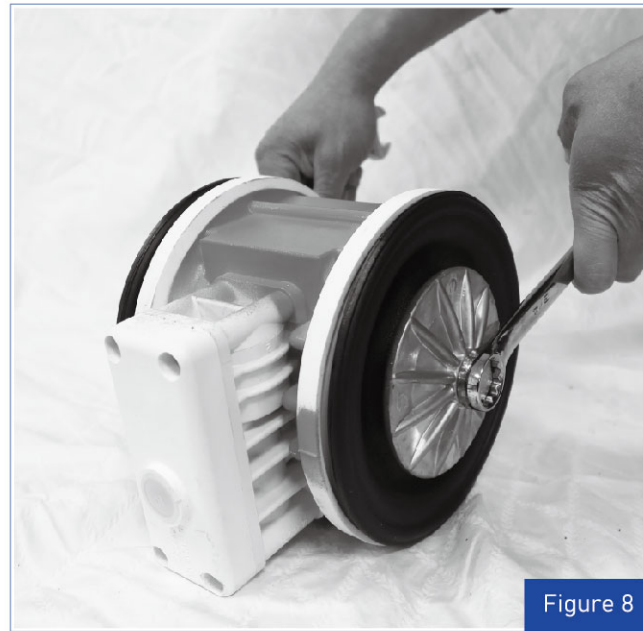


Figure 8

Step 8.

Use a (3/4") wrench, rotate the diaphragm, remove the diaphragm from center section.

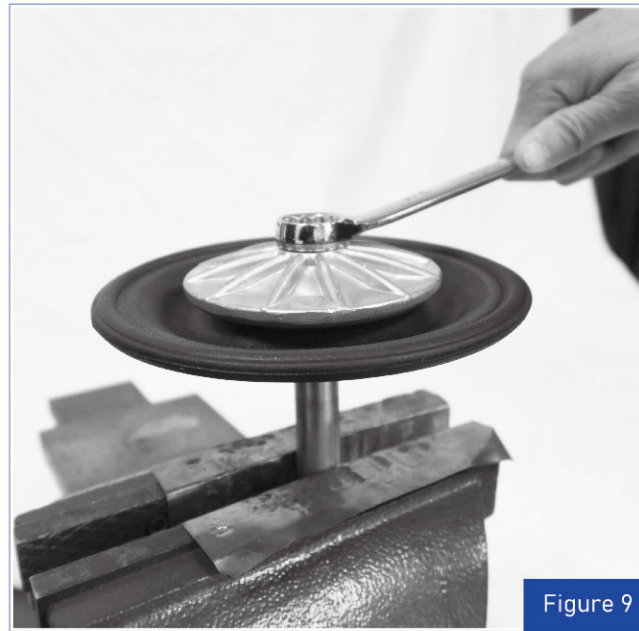


Figure 9

Step 9.

Secure the shaft with soft jaws, remove the diaphragm from the assembly, Inspect o-rings for wear or damage and replace with genuine Liquade parts for reliable.

SECTION 7

AIR VALVE / CLEANING & INSPECTION

AIR VALVE DISASSEMBLY:

CAUTION: Before perform any maintenance or repair, disconnect the compressed air line to the pump to allow all air pressure to bleed from pump. Disconnect all inlet, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be careful of dangerous effects of contact with the process fluid.

TOOLS REQUIRED:

- 3/16" Allen Wrench
- Snap Ring Pliers
- O-Ring Pick

CAUTION:

Before carry out disassembly, drain all remaining fluid in the pump into a suitable container by turning it up-side down. Take extra caution if the liquid is corrosive or toxic.

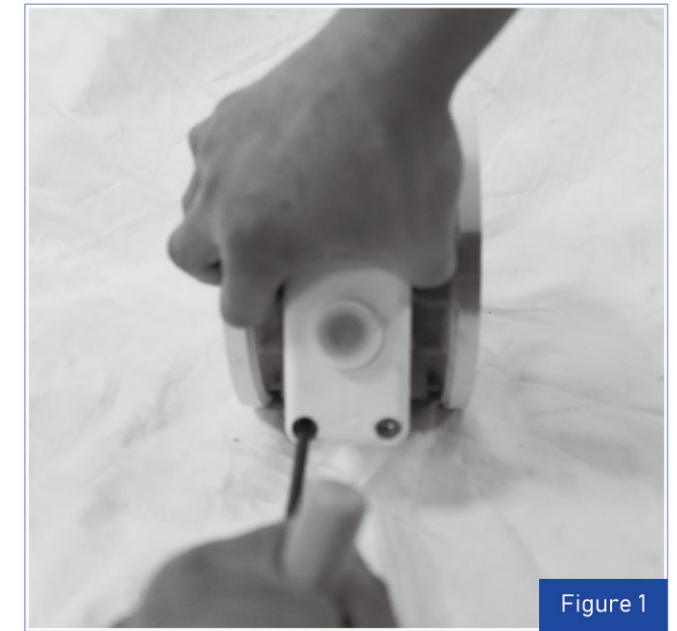


Figure 1

Step 1.

Loosen the air valve bolts utilizing a 3/16" Allen wrench.

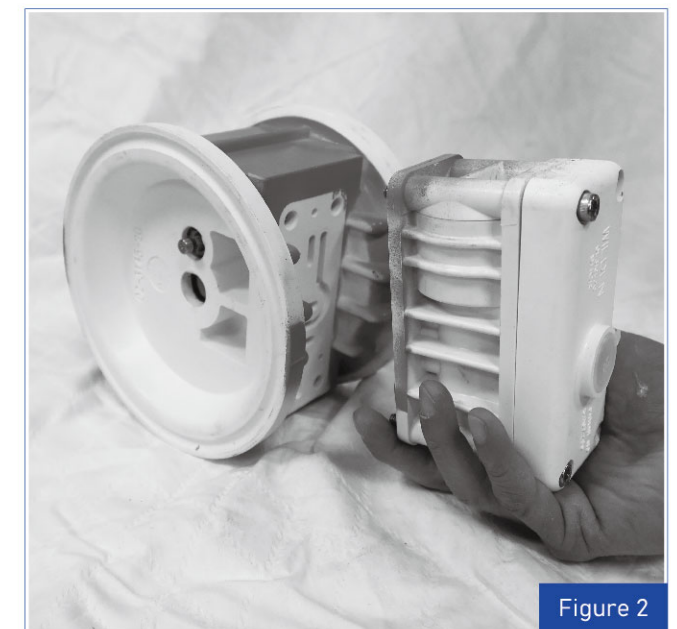


Figure 2

Step 2.

Remove muffler plate and air valve bolts from air valve assembly exposing muffler gasket for inspection. Replace with liquade gasket for reliable performance.

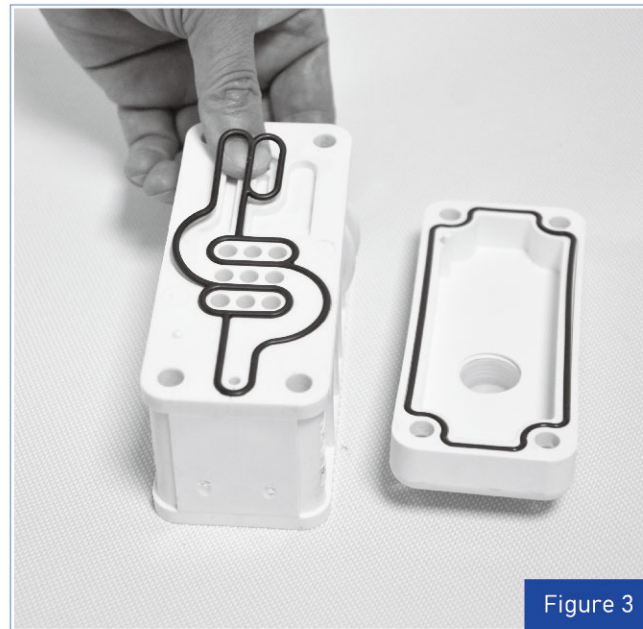


Figure 3

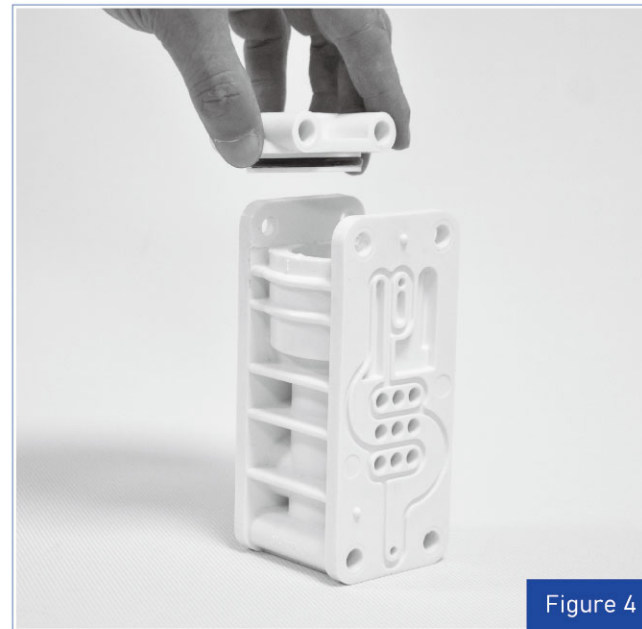


Figure 4

Step 3.
Lift away air valve and remove air valve gasket for inspection. Replace with liquade gasket for reliable performance.

Step 4.
Remove the end cap to expose air valve spool by simply lifting up on end cap once air valve bolts are removed.



Figure 5

Step 5.
Remove air valve spool from air valve body by threading one air valve bolt into the end of the spool and gently sliding the spool out of the air valve body. Check the signs of the wear, replace the spool if necessary. The wear seals are not sold by separately.



Figure 6

Step 6.
Remove pilot spool sleeve retaining snap ring on both sides of center section with snap ring pliers, and lift up pilot spool sleeve from center section.

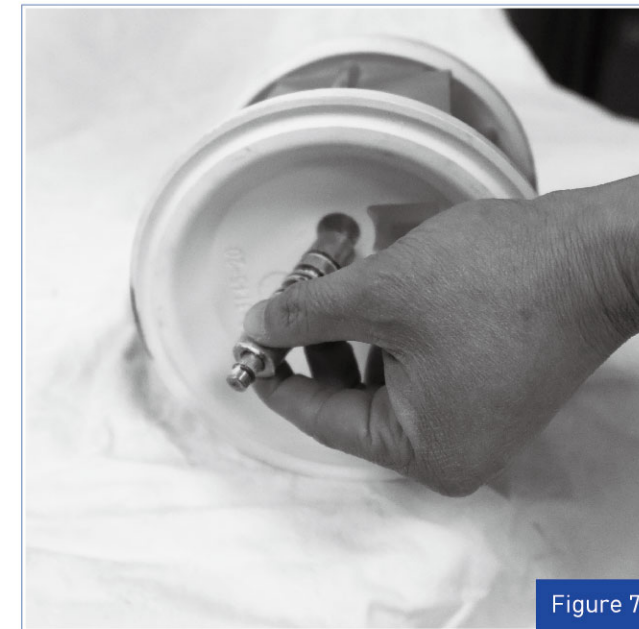


Figure 7

Step 7.
Gently remove the o-ring with o-ring pick from the opposite side of the "center hole" cut on the spool. Check the signs of wear, Replace pilot sleeve assembly for reliable performance.

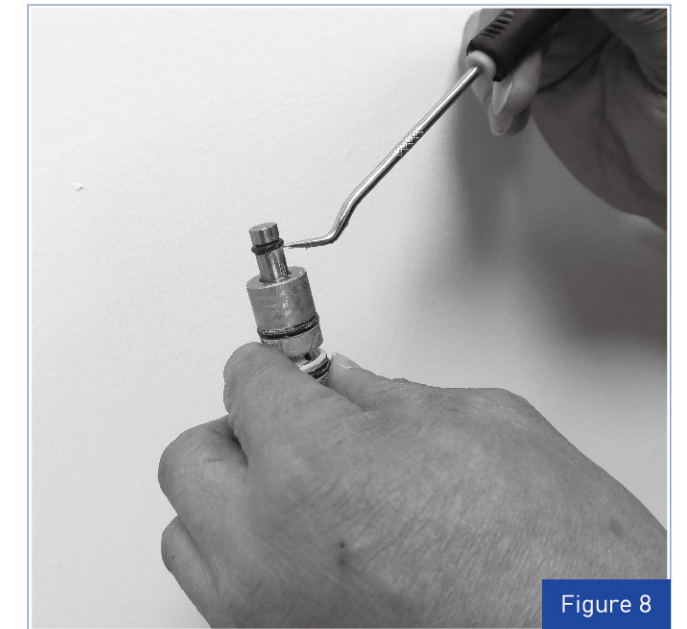


Figure 8

Step 8.
Check center section Glyd rings for signs of wear. Replace the liquade Glyd rings for reliable performance.

Reassembly Hints & Tips

The following tips will assist in the assembly process.


- 1 For reassembly, please refer to disassemble process in reserve order.
- 2 Clean the center section shaft before assembly, make sure no damage for the Glyd rings.
- 3 Lube all the stainless bolts before tightening.
- 4 Using proper torque values to tighten the outer piston, check these values below chart.
- 5 Apply two drops of Loctite® 246 to the shaft internal threads before the diaphragm assembly.

TORQUE SPECIFICATIONS FOR MODEL GT20 Metal PUMPS

Description of Part	Torque
GT Air Valve	3.1 N•m (27 in-lbs.)
Outer Piston, Rubber and PTFE-fitted	40.7 N•m (30 ft-lb)
Small Clamp Band	1.7 N•m (15 in)
Large Clamp Band (Rubber/TPE-Fitted)	9.0 N•m (80 in)
Large Clamp Band (PTFE-Fitted)	13.6 N•m (120 in)
Vertical Bolts	14.1 N•m (125 in)

GT20 MATEL

EXPLODED VIEW

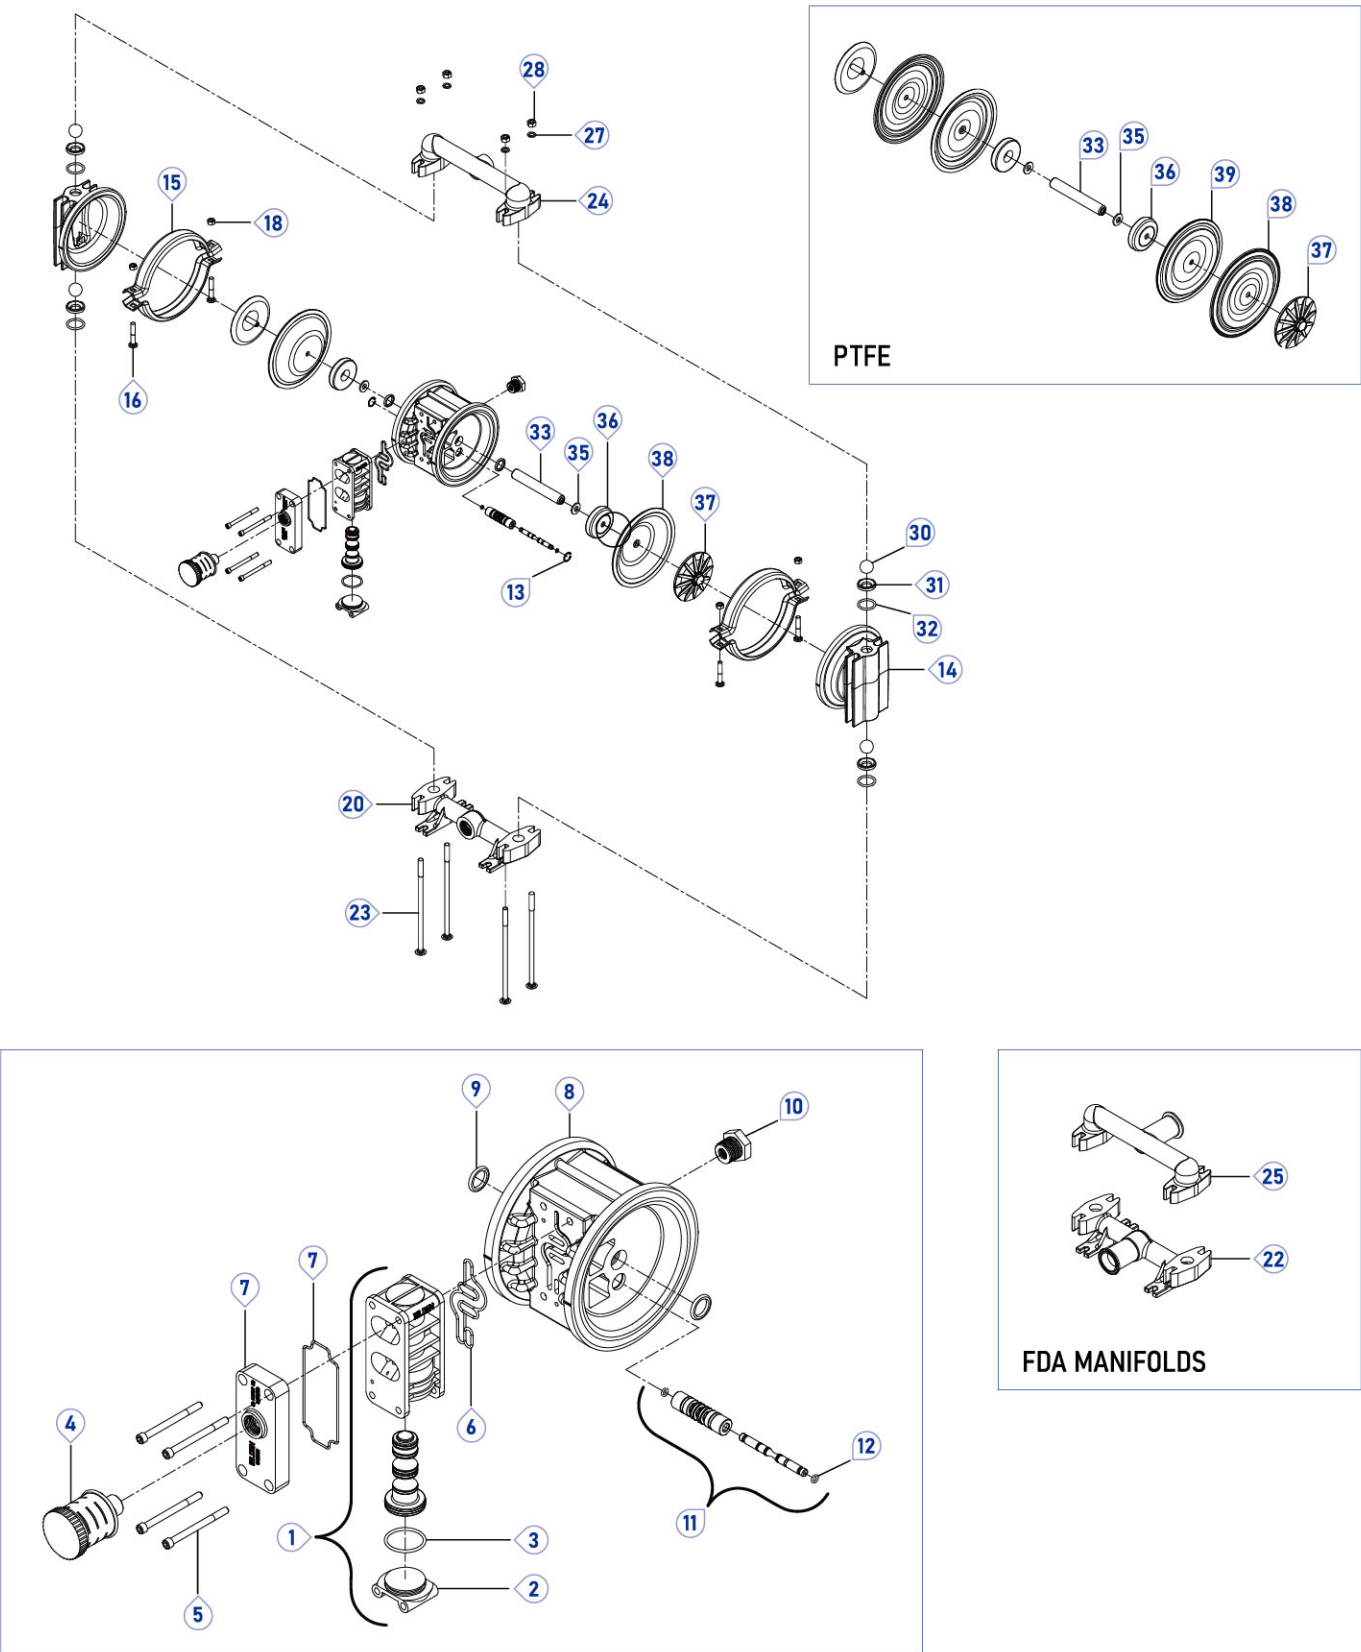

GT20 MATEL

PARTS LISTING

Item #	Description	Qty Per Pump	GT20 APP P/N	GT20 SPP P/N	GT20 SPP/FDA P/N	GTX 20 APP P/N	GTX 20 SPP P/N	GTX 20 SPP/FDA P/N
Air Distribution Components								
1	Air Valve Assembly	1	L01-2010-20	L01-2010-20	L01-2010-20	L01-2010-20C	L01-2010-20C	L01-2010-20C
2	Air Valve End Cap	1	L01-2330-20	L01-2330-20	L01-2330-20	L01-2330-20C	L01-2330-20C	L01-2330-20C
3	End Cap O-Ring	1	L01-2395-52	L01-2395-52	L01-2395-52	L01-2395-52	L01-2395-52	L01-2395-52
4	Muffler	1	L02-3510-99	L02-3510-99	L02-3510-99	L02-3510-99	L02-3510-99	L02-3510-99
5	Air Valve Bolt	4	L01-6001-03	L01-6001-03	L01-6001-03	L01-6001-03	L01-6001-03	L01-6001-03
6	Air Valve Gasket	1	L01-2615-52	L01-2615-52	L01-2615-52	L01-2615-52	L01-2615-52	L01-2615-52
7	Muffler Plate	1	L01-3181-20	L01-3181-20	L01-3181-20	L01-3181-20C	L01-3181-20C	L01-3181-20C
8	Gasket, Muffler Plate, Center Section	1	L01-3505-52	L01-3505-52	L01-3505-52	L01-3505-52	L01-3505-52	L01-3505-52
9	Shaft Seal	2	L02-3210-55-225	L02-3210-55-225	L02-3210-55-225	L02-3210-55-225	L02-3210-55-225	L02-3210-55-225
10	Bushing, Reducer	1	L01-6950-20	L01-6950-20	L01-6950-20	L01-6950-20	L01-6950-20	L01-6950-20
11	Pilot Sleeve Assembly	1	L02-3880-99	L02-3880-99	L02-3880-99	L02-3880-99	L02-3880-99	L02-3880-99
12	Pilot Spool Retaining O-Ring	2	L04-2650-49-700	L04-2650-49-700	L04-2650-49-700	L04-2650-49-700	L04-2650-49-700	L04-2650-49-700
13	Retaining Ring	2	L00-2650-03	L00-2650-03	L00-2650-03	L00-2650-03	L00-2650-03	L00-2650-03
Wetted Path Components								
14	Liquid Chamber	2	L02-5004-01	L02-5004-03	L02-5004-03	L02-5004-01	L02-5004-03	L02-5004-03
15	Clamp Band Assy. Large	2	L02-7300-08-400	L02-7300-03-400	L02-7300-03-400	L02-7300-08-400	L02-7300-03-400	L02-7300-03-400
16	Bolt, RHSN, 5/16"-18 X 2"	4	L08-6050-08-50	L08-6050-03-50	L08-6050-03-50	L08-6050-08-50	L08-6050-03-50	L08-6050-03-50
17	Washer, (.344 I.D. X .6880 D. X .065)	4	-	-	L02-6731-03	-	-	L02-6731-03
18	Nut, Hex, 5/16"-18	4	L04-6420-08	L08-6400-03	-	L04-6420-08	L08-6400-03	-
19	Wing Nut, 5/16"-18	4	-	-	L08-6661-10	-	-	L08-6661-10
20	Manifold, Inlet (NPT)	1	L02-5084-01	L02-5084-03	-	L02-5084-01	L02-5084-03	-
21	Manifold, Inlet (BSPT)	1	L02-5086-01	L02-5086-03	-	L02-5086-01	L02-5086-03	-
22	Manifold, Inlet (Tri-Clamp)	1	-	-	L02-5088-03-70	-	-	L02-5088-03-70
23	Bolt, RHSN, 3/8"-16 X 8 1/2"	4	L02-6080-08	L02-6080-03	L02-6080-03	L02-6080-08	L02-6080-03	L02-6080-03
24	Manifold, Discharge (NPT)	1	L02-5024-01	L02-5024-03	-	L02-5024-01	L02-5024-03	-
25	Manifold, Discharge (BSPT)	1	L02-5026-01	L02-5026-03	-	L02-5026-01	L02-5026-03	-
26	Manifold, Discharge (Tri-Clamp)	1	-	-	L02-5028-03-70	-	-	L02-5028-03-70
27	Washer, Flat (Ø.390 X Ø.625 X .063)	4	L15-6720-08	L02-6730-03	L02-6730-03	L15-6720-08	L02-6730-03	L02-6730-03
28	Nut, Hex, 3/8"-16	4	L02-6430-08	L02-6430-03	-	L02-6430-08	L02-6430-03	-
29	Wing Nut, 3/8"-16 (not shown)	4	-	-	L08-6671-10	-	-	L08-6671-10
Valve Balls/Valve Seats/Valve O-rings/Manifold O-Ring								
30	Ball Valve	4	*	*	*	*	*	*
31	Valve Seat	4	*	*	*	*	*	*
32	Valve Seat O-Ring (2.250" x .210")	4	*	*	*	*	*	*
PTFE/Rubber/TP Components								
33	Shaft	1		L02-3810-03			L02-3810-03	
34	Shaft Stud, 3/8"-16 X 1-1/4"	2		L02-6150-03-85	L02-6150-03-85		L02-6150-03-85	L02-6150-03-85
35	Spring, Disk	2		L02-6802-08			L02-6802-08	
36	Piston, Inner	2		L02-3701-01			L02-3701-01	
37	Piston, Outer	2	L02-4550-01	L02-4550-03	LL02-4550-03	L02-4550-01	L02-4550-03	LL02-4550-03
38	Diaphragm, PTFE/Rubber/TPE	2		*			*	
39	Diaphragm, Back-Up	2		*			*	

*Refer to Elastomer Options in Section 9.

¹ Air Valve Assembly includes items 2, 3.

GT20 METAL

Material	Diaphragms	Back-Up Diaphragm	Valve Ball	Manifold O-Ring	Valve Seat O-Ring
Neoprene	L02-1010-51	-	L02-1080-51	L02-1120-01	L02-1200-52
Buna	L02-1010-52	-	L02-1080-52	L02-1120-01	L02-1200-52
FKM	L02-1010-53	-	L02-1080-53	L02-1120-01	L02-1200-53
EPDM	L02-1010-54	-	L02-1080-54	L02-1120-01	L02-1200-53
PTFE	L02-1040-55	L02-1065-57	L02-1080-55	L02-1120-01	L02-1200-55
Santoprene	L02-1022-58	-	L02-1080-58	L02-1120-01	L02-1200-53
Hytrel	L02-1010-56	-	L02-1080-56	L02-1120-01	L02-1200-56
Aluminum				L02-1120-01	
316 Stainless Steel				L02-1120-03	

All products by LIQUADE are built to meet the highest standards of quality and are guaranteed to be free from defects in material and workmanship for a period of five (5) years from date of installation or six (6) years from date of manufacture, whichever comes first. Failure due to wear and tear or misapplication, shall be excluded from this warranty. Warranty shall be deemed void if unauthorized modifications are made to the pump or serviced by unauthorized LIQUADE personnel or partners.

LIQUADE cannot guarantee the suitability of the pump or parts for any particular application. In addition, LIQUADE shall not be liable for consequential damage or expense arising from the use or misuse of its products on any application. Warranty is limited to replacement or repair of the pump or part at the factory or at a point designated by LIQUADE.

Prior approval must be obtained from LIQUADE for return of any product for warranty consideration and must be accompanied by the legitimate MSDS for the product(s) involved. Also, this warranty does not obligate LIQUADE to bear the cost of labour or transportation charges in connection with replacement or repair of defective pumps/parts.

All investigation as to the cause of failure of the pump shall be solely determined by Liquade and its decision deemed final.

This warranty is in lieu of all other warranties and conditions expressed or implied, written or oral, statutory to the extent allowable by law or otherwise, which are hereby negated and excluded.

PLEASE FILL OUT THE FORM BELOW AND RETURN BY FAX OR EMAIL

PUMP INFORMATION

Item #

Serial#

Company Where Purchased

YOUR INFORMATION

Company Name

Industry

Name

Title

Street address

City

State

Postal Code

Country

Telephone

Fax

E-mail

Website

Number of pumps in facility? _____ Number of Liquade pumps? _____

Types of pumps in facility (check all that apply) ☐ Diaphragm ☐ Centrifugal ☐ Gear ☐ Submersible ☐ Submersible

☐ Others (please indicate) _____

Media being pumped _____

How did you hear of Liquade Pump? ☐ Trade Journal ☐ Trade Show ☐ Internet/Email ☐ Distributor

☐ Others (please indicate) _____